EN USER‘S MANUAL

TV-Wandhalter
TV wall mount
TV Support mural
Attacco a parete per TV

51884 Goobay TV EasyScope M si

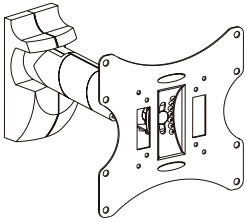

51894 Goobay TV EasyScope M sw

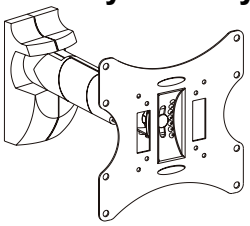

51885 Goobay TV EasyScope Twin M si

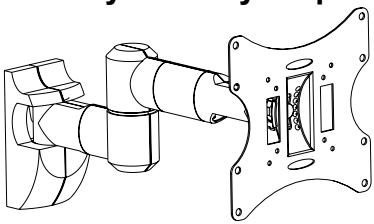

51895 Goobay TV EasyScope Twin M sw

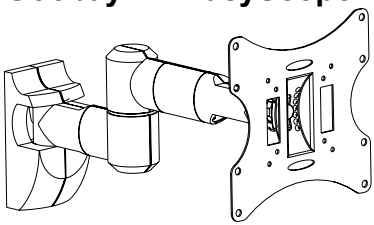

EN

USER’S MANUAL..... 20

USER’S MANUAL

Content

1 Safety Instructions 21
1.1 General Notes 21
1.2 User Groups 22
1.3 Warning Levels 22
2 Description and Function 23
2.1 Scope of Delivery for Models 51884 and 51894 23
2.2 Scope of Delivery for Models 51885 and 51895 25
2.3 Required Tools for all Models 27
3 Intended Use 28
3.1 Use restrictions 28
4 Installing 28
4.1 Preparing 28
4.2 Wall mounting 28
4.3 Assembling the VESA plate 29
4.4 Mounting the flat screen 30
4.5 Hanging in and Fixing VESA plate and Flat screen 31
4.6 Laying the cables and attaching the covers 31
4.6.1 Laying the cables 32
4.6.2 Mounting the TV wall mount covers 32
4.6.3 Mounting the covers 32
4.7 Adjusting the TV wall mount and the Flat screen 33
5 Warranty and Liability 33
6 Maintenance, Care, Storage and Transport 34
7 Troubleshooting 34
8 Specifications 35
8.1 Specifications of Models 51884 and 51894 35
8.2 Specifications of Models 51885 and 51895 35
9 Information for VESA standard 36
10 Disposal Instructions 36

1 Safety Instructions

1.1 General Notes

- Read the including product documentation completely and carefully before use. It is part of the product.
- Attend to the safety instructions in product documentation, on product and accessories, such as on the package.
- Use product, product parts and accessories only in perfect condition.
- Keep the product documentation for other potential users and for later requests.
- For questions, defects, mechanical damage, disturbances and other not remediable problems, consult your dealer.

Risk of life by suffocating

Children can suffocate by swallowed or inhaled parts and insulation materials.

>> Protect small parts and insulation material against unintentionally use.

Risk of injury by tripping and falling

Unfavorable placed or installed products and cable connections can injure persons.

>> Place, transport and install product, parts and acceories in a safe way.

>> When working with burdens, secure yourself and the working place, let a second person help you.

>> Let only a specialist do disassembly, maintenance and repair work.

Risk of injury by cutting

Children can cut themselves on packaging materials.

>> Protect packaging materials against unintentionally use.

Risk of material damage by improper product combination

Incompatible product combination does not fulfill required functions, can cause quality losses or material damage.

>> The specifications of all used products must match or be within the specified range.

Risk of injury by inappropriate ambient conditions

Extreme conditions can injure persons.

>> Attend to live cables or other lines lying behind plaster, and do not damage them!

>> Do not install the product to places with direct sunlight or bright light. This contributes to eye fatigue.

Risk of injury by moving product parts

Moving product parts can pinch or squeeze limbs.

>> Do not hold limbs between shear parts during use.

>> Mind the mobility of the product during use. This may move away from the wall or towards it and swivel sideways.

EN

Risk of self-intervention and misuse

Self-interventions and misuse hide unpredictable risks and cause expiration of warranty.

>> Do not modify or alter either the product or the accessories!

Risk of material damage by inappropriate ambient conditions

Incorrect ambient conditions can damage things.

>> Avoid extreme conditions, such as extreme heat, coldness, humidity or direct exposure to the sun, as well as vibrations and mechanical pressure.

>> Keep enough space around product and to the whole system to ensure proper ventilation and mobility.

The included mounting material is only suitable for mounting on massive stone or concrete walls.

>> For other wall types use suitable mounting material.

>> Check the stability of the system periodically after installation.

1.2 User Groups

Caused to different risk levels and hazard potentials some working steps only may be done by trained specialists.

Working step	User Group
Installing, Uninstalling, Aligning, Care, Storage, Transport, Disposal	Consumers and users with basical mechanical knowledge can do this work. >> Protect children and people with mental and motoral impairments from using the product!
Maintenance, Repairing	Trained specialists only >> special safety measures, knowledge and tools are necessary!

Tab.15: User Groups

1.3 Warning Levels

⚠ DANGER

Warnings against hazards that will result **directly in serious injuries or death** in case of non-observance.

⚠ WARNING

Warnings against hazards that may result in **serious injuries or death** in case of nonobservance.

⚠ CAUTION

Warnings against hazards that may result in **injuries** in case of non-observance.

NOTICE

Warnings against hazards that may result in **material damage** in case of non-observance.

2 Description and Function

Your TV wall mount is used for mounting your flat screen to secure vertical walls. All listed models are individually tiltable and swivelable and come with cable management system.

Models 51885 and 51895 come with double arms and offer a bigger variety.

Refer to the details in the technical specifications.

2.1 Scope of Delivery for Models 51884 and 51894

Part	Figure	Symbol	Amount
Wall mounting			
TV wall mount with VESA plate 51884 or 51894		A	1
Wall screw 6.3x55		W-A	6
Concrete anchor		W-B	6
Washer D6		W-C	6
Flat screen mounting			
VESA plate		B	1
Cover		C	1
Cover		D	1
TV wall mount cover		E	1

EN

TV wall mount cover		F	1
Handle holder		G	1
Plastic pad		H	1
M8 Nut		I	1
M8 Washer		J	2
M8x20		K	1
M8x50		L	1
M8 Adjusting wheel		M	1
M8 Snap ring		N	1
D8 Washer		O	1
Flat screen mounting			
M4x14		M-A	4
M5x14		M-B	4
M6x14		M-C	4
M8x20		M-D	4
Washer D5		M-E	4
Washer D8		M-F	4

TV Spacer		M-G	8

Tab.16: Scope of Delivery for Models 51884 and 51894

2.2 Scope of Delivery for Models 51885 and 51895

Part	Figure	Symbol	Amount
Wall Mounting			
TV wall mount with VESA plate 51885 or 51895	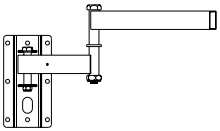	A	1
Wall screw 6.3x55		W-A	6
Concrete anchor		W-B	6
Washer D6		W-C	6
Flat screen mounting			
VESA plate		B	1
Cover		C	1
Cover		D	1
Cover		E	1
Cover		F	1
TV wall mount cover		G	1

EN

TV wall mount cover		H	1
Handle holder		I	1
Plastic pad		J	1
M8 Nut		K	1
M8 Washer		L	2
M8x20		M	1
M8x50		N	1
M8 Adjusting wheel		O	1
M8 Snap ring		P	1
D8 Washer		Q	1
Flat screen mounting			
M4x14		M-A	4
M5x14		M-B	4
M6x14		M-C	4
M8x20		M-D	4
Washer D5		M-E	4
Washer D8		M-F	4

TV Spacer		M-G	8

Tab.17: Scope of Delivery for Models 51885 and 51895

2.3 Required Tools for all Models

Tool	Figure
Line tester	
Spirit level	
Pencil	
Drilling mashine	
Concrete drill 8x60mm	
Phillips screwdriver	
M8 Wrench	
Second Person	
Scissors	

Tab.18: Required Tools for all Models

EN

3 Intended Use

This product is made for mounting flat screens with specific screen sizes, weights and mounting points, which are summarized in chapter “Specifications“, on a vertical wall. Another use than described in chapter “Description and Function“ is not permitted. Neglegting and ignoring these regulations and safety instructions can cause serious accidents, personal injury and material damage. Also refer to chapter “Warranty and Liability“.

3.1 Use restrictions

Only use in dry interior rooms.

4 Installing

4.1 Preparing

Checking the completeness and integrity

>> Check the packing content by comparing it to the scope of delivery regarding completeness and integrity.

Ensuring compatibility

NOTICE	**Risk of material damage by improper product combination** >> The specifications of all used products must match or be within the specified range.	

Tab.19: Ensuring compatibility

4.2 Wall mounting

⚠ CAUTION	**Risk of injury due to inappropriate ambient conditions** >> Check the wall structure before installing or choose a safe installation place. >> Attend to live cables or other lines lying behind plaster, and do not damage them!	
	>> Do not install the product to places with direct sunlight or bright light. This contributes to eye fatigue.	
NOTICE	**Risk of material damage by inappropriate ambient conditions** >> Keep enough space around product and to the whole system to ensure proper ventilation and mobility.	

Tab.20: Wall mounting

Tools for all Models



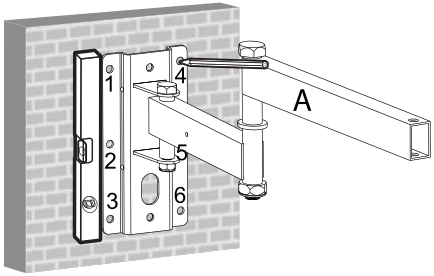

Fig.12: Aligning and Marking

1. Before drilling, attend to live cables or other lines lying behind plaster, and do not damage them.

2. Use a spirit level to mark the drill holes on the wall.

3. Mark the drill holes 1 to 6 with a pencil.
Use the TV wall plate (A) as template.



Fig.13: Drilling drill holes

4. Drill the drill holes with a 10mm concrete drill 60mm deep.

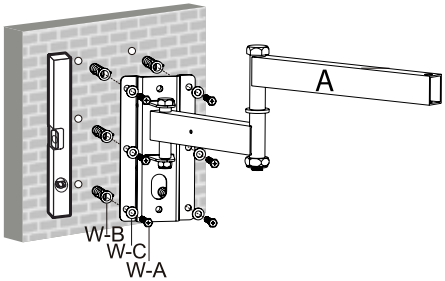

Fig.14: Wall mounting

5. Plug a concrete anchor (W-B) in each drilling hole.

6. Attach the TV wall mount (A) with the wall screws (W-A) and washers (W-C) like shown.

4.3 Assembling the VESA plate

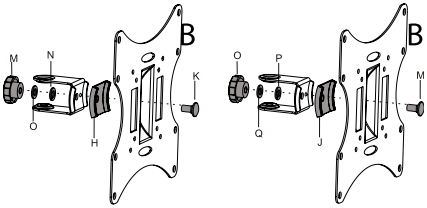

Fig.15: Assembling the VESA plate of 51884/51894 and 51885/51895

1. Connect the parts like shown. Therefor, attend to the different part names of model 51884/51894 and 51885/51895.

2. Fix the M8 Adjusting wheel (M) / (O) clockwise.

EN

4.4 Mounting the flat screen

⚠ CAUTION	**Risk of injury by tripping and falling** >> Place, transport and install product, parts and acceories in a safe way.	
NOTICE	**Risk of material damage by improper procedure** >> Only use moderate force when tightening the screws in order to avoid damaging threads.	
	>> NEVER set the screen on the front during installation! >> Do not damage the flat screen by too long screws.	

Tab.21: Mounting the flat screen

Tools for all Models

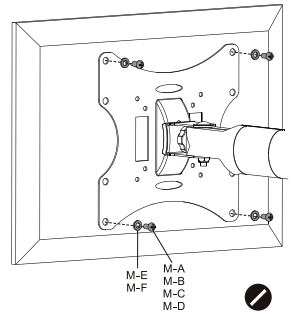

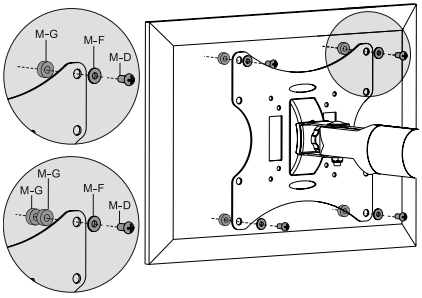

Fig.16: Mounting the flat screen

1. Lean the flat screen vertically on a soft, large surface or a wall and protect it of scratches and overturning.

2. Attach the VESA plate (B) with the washers and screws, fitting to your flat screen at the flat screens back as shown.

Flat screens with arched backs can be mounted to the VESA plate by using the TV spacers (M-G) in single or double version.

4.5 Hanging in and Fixing VESA plate and Flat screen

Risk of injury by tripping and falling

CAUTION

>> Place, transport and install product, parts and acceories in a safe way.
>> When working with burdens, secure yourself and the working place, let a second person help you.

Risk of material damage by inappropriate ambient conditions

NOTICE

>> Keep enough space around product and to the whole system to ensure proper ventilation and mobility.

Tab.22: Hanging in and Fixing VESA plate and Flat screen

Tools for all Models

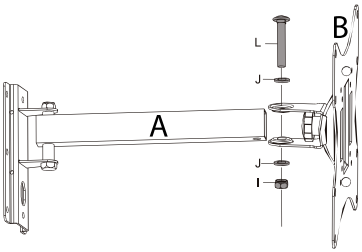

Fig.17: Hanging in and Fixing VESA plate and Flat screen 51884/51894

1. Assemble the preassembled flat screen and VESA plate (B) together with a second person to the TV wall mount (A), like shown.

2. Fix the connection by the mounting material like shown.

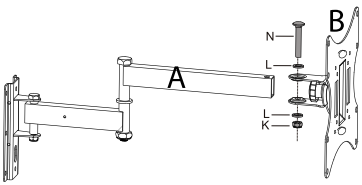

Fig.18: Hanging in and Fixing VESA plate and Flat screen 51885/51895

Attend to the different part names of models 51884/51894 and 51885/51895.

4.6 Laying the cables and attaching the covers

Risk of material damage by inappropriate ambient conditions

NOTICE

>> Keep enough space around product and to the whole system to ensure proper ventilation and mobility.

Tab.23: Laying the cables and attaching the covers

EN

4.6.1 Laying the cables

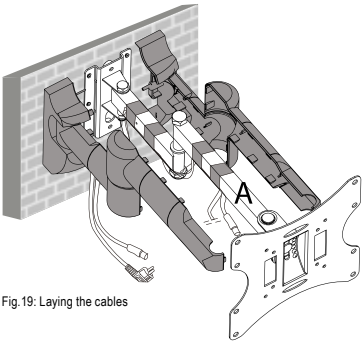

Fig.19: Laying the cables

1. Use sufficient long cables.
2. Lay them along the swivel arms.
3. Use tape for fixing.

Leave enough slack in the cables to ensure mobility of the system

4.6.2 Mounting the TV wall mount covers

Tools for all Models

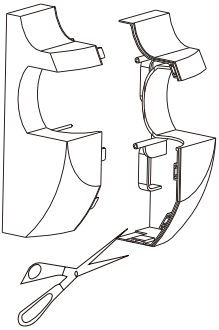

Fig.20: Mounting the TV wall mount covers

1. Cut the edges on the lower side of the TV wall mount covers at the breaking points for laying the cables.

Attend to the different part names of models 51884/51894 and 51885/51895.

2. Plug the TV wall mount covers laterally from right and left onto the TV wall mount (A).

4.6.3 Mounting the covers

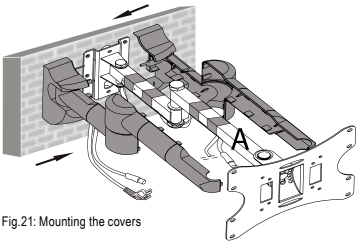

Fig.21: Mounting the covers

1. Plug the covers laterally from right and left onto the TV wall mount (A).

Attend to the different part names and scope of delivery of models 51884/51894 and 51885/51895.

End of installing. To remove, proceed in reversed order.

4.7 Adjusting the TV wall mount and the Flat screen

⚠ CAUTION	**Risk of injury by moving product parts** >> Do not hold limbs between shear parts during use. >> Mind the mobility of the product during use. This may move away from the wall or towards it and swivel sideways.	
NOTICE	**Risk of material damage by inappropriate ambient conditions** >> Keep enough space around product and to the whole system to ensure proper ventilation and mobility.	

Tab.24: Adjusting the TV wall mount and the Flat screen

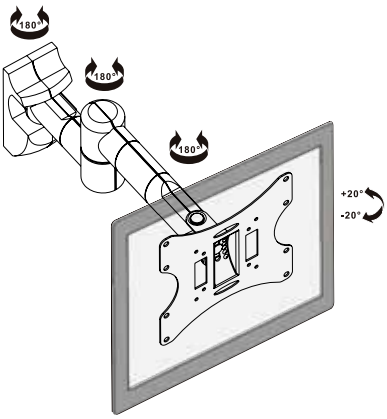

Fig.22: Adjusting the TV wall mount and the Flat screen

1. Align the flat screen horizontally if needed.

2. Align the flat screen vertically if needed
   >> Hold the flat screen with one hand, when loosening the M8 Adjusting wheel.
   >> Adjust the tilting angle.
   >> Tighten the M8 Adjusting wheel.

5 Warranty and Liability

- The producer grants a 2 years warranty to a new device.
- As the manufacturer has no influence on installation, warranty only applies to the product itself.
- If any fault or damage is detected on your device, please contact your dealer and provide your sales slip or invoice as evidence of the purchase, if necessary. Your dealer will repair the fault either on site, or send the device to the manufacturer. You make the work of our technicians considerably easier, describing possible faults in detail – only then you can be assured that faults, occurring only rarely, will be found and repaired with certainty!
- The manufacturer is not liable for damages to persons or property caused by improper installation, operation or maintenance, not described in the manual.
- Do not alter or modify the product or its accessories.
- Any use other than described in this user`s manual is not permitted and

EN

causes loss of warranty, loss of guarantee, and non-liability.
- We reserve our right for misprints and changes of the device, packing, or user`s manual.

6 Maintenance, Care, Storage and Transport

- The product must be maintained only by professional workshops.
- Protect the angles from dirt and grease them regularly with light machine oil.
- Use a dry and soft cloth to clean your product. Be careful to avoid scratches. Use a slightly moist cloth for heavy stains. Look out for live cables! Do not use any cleaning supplies. This can cause burns to the materials. Avoid liquid entry to the device.
- Make sure no body parts will be pinched in the swivel device, when parts of the device are moved!
- Periodically check, if all attachments and screws are secured, and tighten them again when they are loosened. This may be caused e.g. by frequent movements. Do not overtighten screws.
- Avoid places with high temperatures, humidity, or places which can become wet, also during maintenance, care, storage, and transport.
- Keep the product away from children and store it at dry and dust-proof places!
- Drill holes are still visible after removing the product. After use for a longer time period, a spot may remain on the surface.
- Keep the original packing for transport and to avoid damages.

7 Troubleshooting

Problem	Help
How to test wall quality?	Loads for home use are regulated in various European standards. >> Check wall thickness and material under plaster / wall paper. >> Ask a specialist.
Which drill holes must be drilled?	>> Read chapter 4.2.
The wall mount is hard to align.	>> Due the TV size the maximum swivel angle may be smaller than indicated.
Other questions	>> Contact your dealer.

Tab.25: Troubleshooting

8 Specifications

8.1 Specifications of Models 51884 and 51894

Physical size	Specification	Unit
TV Size	17-42	“ / Inch
VESA	75x75 / 100x100 / 200x100 / 200x200	mm
Load	max. 30	kg
Tilting angle	+/-20	°
Swivel angle of VESA plate	+/-90	°
Swivel angle per swivel arm	+/-90	°
Color	51884: silver 51894: black	
Wall distance	100-330	mm
Dimensions	220 x 220 x 100-330	mm
Weight	1.3	kg

Tab.26: Specifications of Models 51884 and 51894

8.2 Specifications of Models 51885 and 51895

Physical size	Specification	Unit
TV Size	17-42	“ / Inch
VESA	75x75 / 100x100 / 200x100 / 200x200	mm
Load	max. 30	kg
Tilting angle	+/-20	°
Swivel angle of VESA plate	+/-90	°
Swivel angle per swivel arm	+/-90	°
Color	51885: silver 51895: black	°
Wall distance	100-470	mm
Dimensions	220 x 220 x 100-470	mm
Weight	1.76	kg

Tab.27: Specifications of Models 51885 and 51895

EN

9 Information for VESA standard

To harmonize attachment options of monitors, TV devices and their stands and wall brackets in a user-friendly manner, VESA (Video Electronic Standard Association) defined 3 standards for the applications mentioned above. Using the relevant VESA standard specified on your display unit, or in its user‘s manual, and the specifications in Chapter Specifications in this manual you are able to define the possible points of attachment. Some models allow for an infinitely variable individual attachment (e.g. 300 x 300 mm for Sony TVs).

VESA Class	Hole distance for attachment of monitors
MIS-D	75x75 / 100x100mm
MIS-E	200x100 / 200x200mm
MIS-F	400x200 / 400x400 / 600x200 / 600x400 / 800x400mm

Tab.28: Information for VESA standard

10 Disposal Instructions

This product should not be disposed together with domestic waste. Please return your product free of charge at the end of its service life at the producer, the sales outlet, or a public collection point, established for this purpose. Details for disposal are regulated in the relevant federal state law. Potential recyclable materials are fed into the recycling cycle to obtain new raw materials from them. Following materials are collected a local collection points:

- Waste glass, plastic, waste metal, metal sheet, and more.

This type of recycling of waste contributes significantly to the protection of our environment.

EN USER‘S MANUAL

TV-Wandhalter
TV wall mount
TV Support mural
Attacco a parete per TV

51884
51894
51885
51895

Revision 2013-10-16
Version 3

Goobay®
Pillmannstraße 12
38112 Braunschweig
Germany

Made in China.

Hotline: +49 (0180) 5005882
E-Mail: info@goobay.de
Web: www.goobay.de

*(0,14 € pro Minute aus dem deutschen Festnetz.
Maximal 0,42 € pro Minute aus dem Mobilfunknetz.)